


BILLIE FIRMWARE 3.0 | REMOTE & SETTINGS

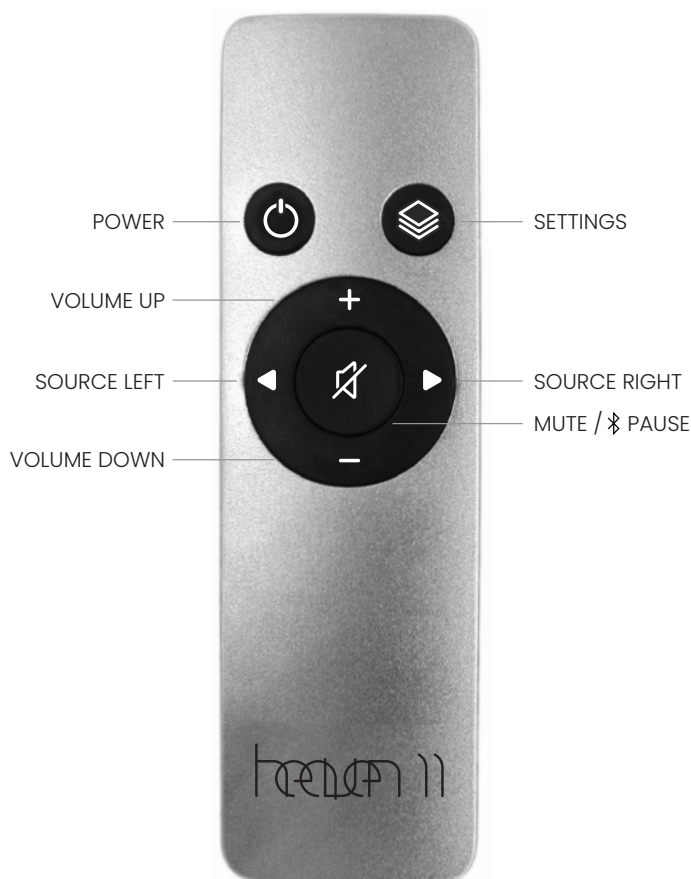

REMOTE SETTINGS

Additional features are available by double-clicking the remote's **SETTINGS** key followed by a command key

- ⏻ START UP VOLUME
- 🔇 MUTE PRE/SUB OUTPUT
- DARK MODE
- + BLUETOOTH PAIR
- ▶ TUBE-SAVER ON/OFF
- ◀ TUBE-SAVER DIGITAL MODE

EXAMPLE | to register the current volume as the preferred START UP VOLUME, double-click the **SETTINGS** key. The tube lights will flicker. Now press the **POWER** key. Tube lights will wink to confirm.

MUTE PRE and **DARK MODE** reset to off on standby. All settings reset to factory default when the amp is turned off using the backpanel power switch.

For **TUBE-SAVER** messaging, see below.

ON-AMP SETTINGS

Some settings can be set using the **SOURCE** knob while **Billie** is in standby. The settings toggle between 2 states

SINGLE-CLICK | TUBE-SAVER (AUTO SHUT-OFF)

1 tube wink: tube-saver activated (default).
2 tube winks: tube-saver deactivated.
Note: Billie will always auto shut-off if muted more than 30 minutes.

DOUBLE-CLICK | TUBE-SAVER DETECT ON DIGITAL INPUTS

1 tube wink: tube-saver uses sound level detection (default).
2 tube winks: tube-saver uses digital stream detection. More precise, but not compatible with all players.
Note: digital stream detection is always used for the Bluetooth input.

CLICK & HOLD | RCA PRE OUTPUTS

1 tube wink: outputs set to pre/sub (default).
2 tube winks: outputs set to volume bypass line-level.

All settings are reset to factory default when the amp is turned off using the backpanel power switch.