


BILLIE MK3 REMOTE

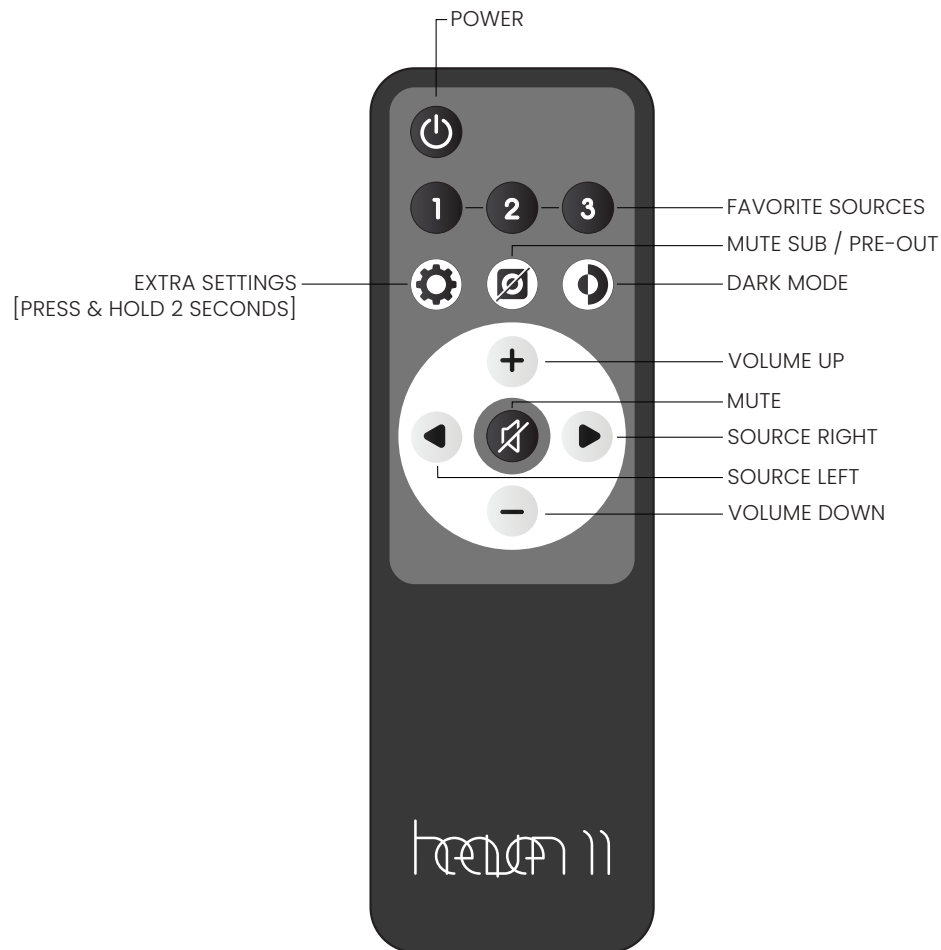

1|2|3 Quick recall of favorite sources. Program favorites using the EXTRA SETTINGS below.

MUTE SUB / PRE-OUT Mutes the pre-out for “midnight listening”. Automatically resets after standby.

DARK MODE Sets amp to low-light display mode. Automatically resets after standby.

EXTRA SETTINGS Configure additional Billie settings. Press and hold for 2 seconds to enter settings mode, followed by chosen setting button. If no button is pressed, the settings mode is cancelled after 3 seconds.

V1.10 | EXTRA SETTINGS MODE

PRESS AND HOLD THE SETTINGS BUTTON FOR 2 SECONDS TO ENTER EXTRA SETTINGS MODE. FLASHING TUBES CONFIRM ACTIVATION. PRESS THE DESIRED SETTINGS BUTTON TO ADJUST. IF NO INPUT IS RECEIVED, SETTINGS MODE EXITS AUTOMATICALLY AFTER 3 SECONDS.

CHILD LOCK Prevents Billie from being powered on via the volume knob. Only the remote can turn it on. If the remote is lost, reset to default by switching off the main power.

1 | 2 | 3 Assigns the current audio source as a favorite button for quick recall.

PRE | LINE SELECT Switches between pre-out and full-volume line-level output.

1 TUBE WINK: output set to line-level.

2 TUBE WINKS: DEFAULT output set to preamp|subwoofer mode.

TUBE SAVER DISABLE Prevents the amplifier from automatically turning off after 30 minutes of silence.

1 TUBE WINK: Tube Saver disabled.

2 TUBE WINKS: DEFAULT Tube Saver enabled.

TUBE SAVER SENSITIVITY User-adjustable Tube Saver. Press this setting combination repeatedly to cycle through the levels:

1 TUBE WINK: LOW use if the amp powers down during quiet passages.

2 TUBE WINKS: DEFAULT factory setting.

3 TUBE WINKS: HIGH use if the amp remains on when idle.

WEIGHTED VOLUME CURVE Select from three volume curves, with independent settings for headphones and speakers. Press this setting combination repeatedly to cycle through the levels:

1 TUBE WINK: LOW expands the low range for finer low-level control.

2 TUBE WINKS: DEFAULT factory setting.

3 TUBE WINKS: HIGH compresses the low range for finer high-level control.

HOME THEATRE BYPASS Routes control to an external receiver by fixing the current source's volume at maximum. Resets on start-up, headphone use or when switching sources.

SET START-UP VOLUME Sets current volume as default start-up level.

MAX VOLUME LIMITER Locks the current volume as the maximum limit to protect lower-power speakers.

1 TUBE WINK: Limiter enabled to current volume.

2 TUBE WINKS: DEFAULT Limiter disabled.

NOTE | ALL SETTINGS RESET TO FACTORY DEFAULTS WHEN THE BACKPANEL MAINS SWITCH IS TURNED OFF.

