


BILLIE REMOTE MK2

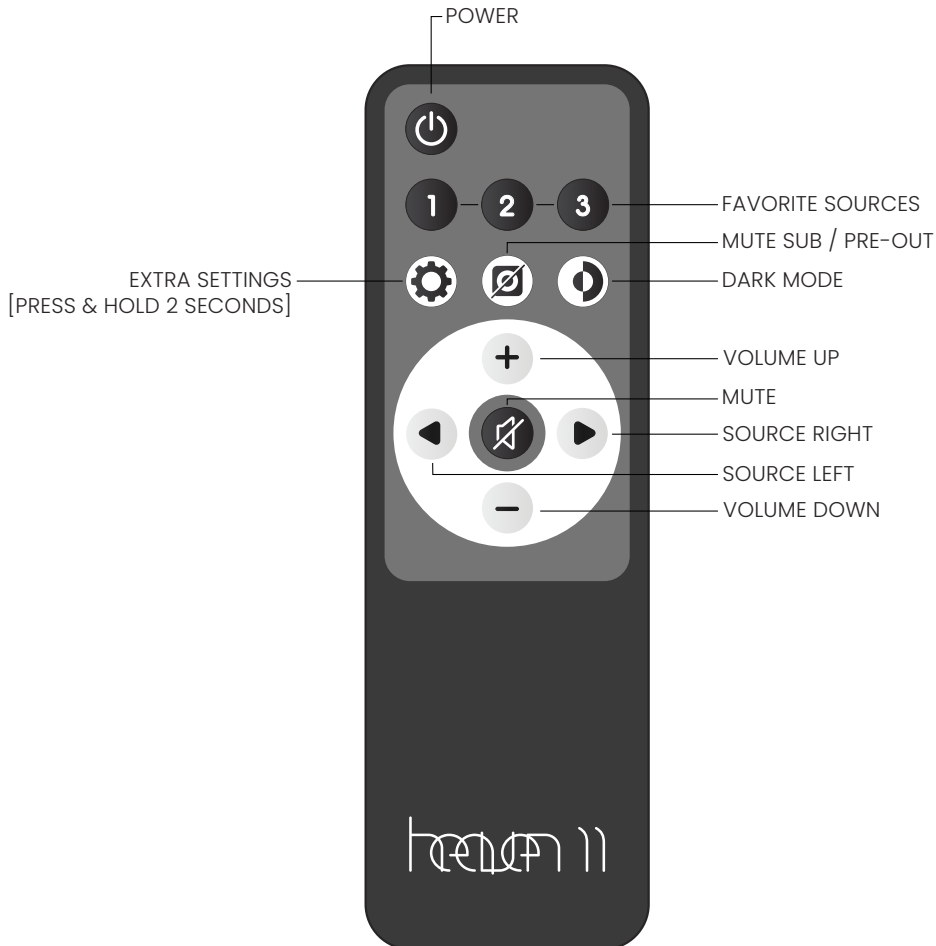


1|2|3 Quick recall of favorite sources. Program favorites using the EXTRA SETTINGS below.

MUTE SUB / PRE-OUT Mutes the pre-out for “midnight listening”. Automatically resets after standby.

DARK MODE Sets amp to low-light display mode. Automatically resets after standby.

EXTRA SETTINGS Configure additional Billie settings. Press and hold for 2 seconds to enter settings mode, followed by chosen setting button. If no button is pressed, the settings mode is cancelled after 3 seconds.

EXTRA SETTINGS MODE

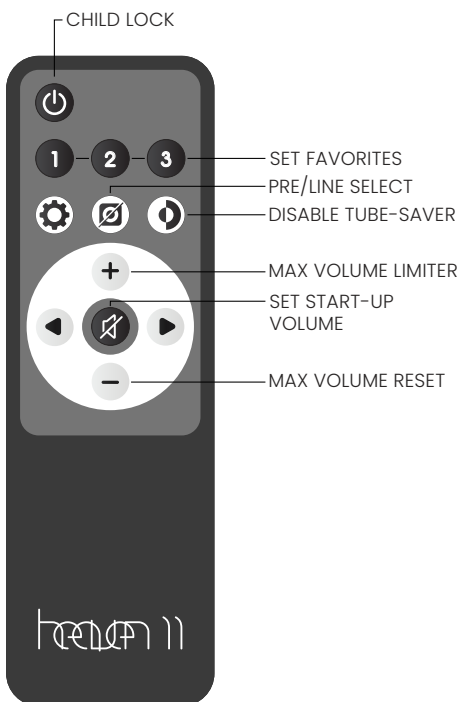

CHILD LOCK Sets Billie to only turn on using the remote. The amp will not respond to the volume knob for turning on. If you misplace the remote, simply reset the amplifier by turning off the power switch.

1|2|3 Sets the current audio source as a favorite to recall.

PRE/LINE SELECT Toggles between pre out and full volume line-level outputs.

1 tube wink: output set to pre/sub [default].
2 tube winks: output set to line-level.

DISABLE TUBE-SAVER Prevents the amplifier from automatically turning off after 30 minutes of silence.

1 tube wink: tube-saver enabled [default].
2 tube winks: tube-saver disabled.

MAX VOLUME LIMITER Set the current volume level as the maximum limit, preventing the amp from exceeding this point. This feature is particularly useful for safeguarding lower power-rated speakers. To reset, press SETTINGS & VOLUME -

SET START-UP VOLUME Establishes the current volume level as the default start-up volume setting.

* All settings will revert to the factory default when the backpanel power switch is turned off.